


Canon – PG-30 / 40 / 50 CL-31 / 41 / 51

Must Read to Install Cartridge

After installing your cartridges, you'll notice the printer still thinks they're empty, despite having just been refilled. This is due to a computer chip installed on the cartridge which remembers that it has been used. This will not prevent you from printing, but you will get a few friendly reminders from the printer that you are using "empty" or refilled cartridges.

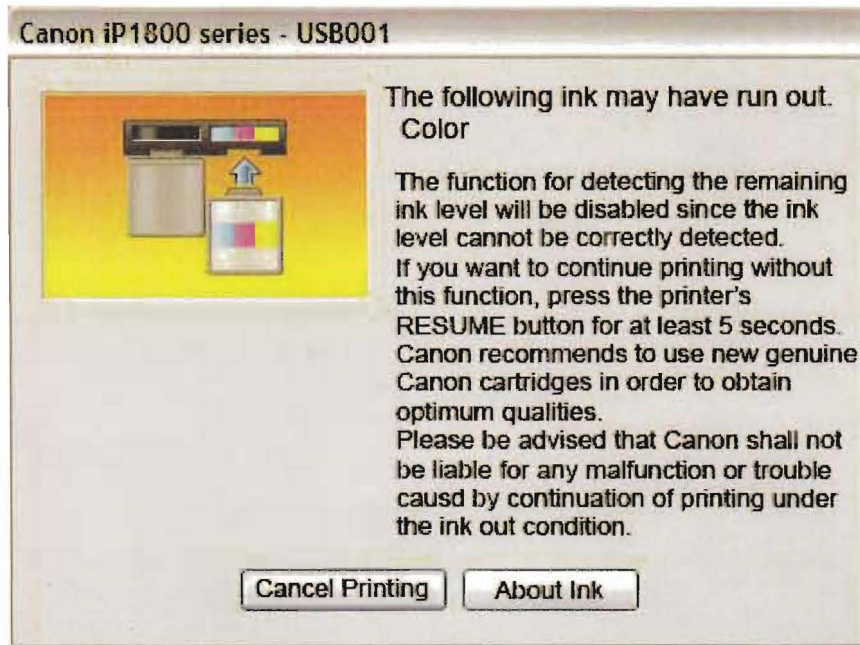

To continue printing (see message above), read the message and follow the steps outlined. You will be prompted to do this once for each of the cartridges refilled. After you've done it, you will never be prompted again for that cartridge.

Standard Printers - You'll generally be asked to press and hold the RESUME button for 5-10 seconds. This button is often marked with a picture of a piece of paper and an arrow pointing down.

PIXMA MP 150/160 printers - If the printer does not print and "E4" or "E16" appears on the printer's LCD screen, simply press the black then the color button on the printer to acknowledge the error.

Multifunction Printers - The steps required for multifunction printers vary from model to model. Some require you to hold down the Stop/Reset button, others may also require you to acknowledge prompts on your printer's LCD screen by pressing the OK button.